

Connecting a Cotag HF500/HF100 reader to Net2

Overview

It reader is compatible with all Cotag active cards and tags.

1 metre reading range when used with Bewator's Cotag® Hands-Free technology cards & tags


30cm reading range when used with Bewator's Proximity Technology cards & tags

Further information is available:

<https://www.norbain.co.uk/products//ref:0105980/>



Cable Pinout	ACU terminal
Vin	+12V
R	Red LED
A	Amber LED
G	Green LED
D0	Wiegand D0
D1	Wiegand D1
-	NOT USED
0V	0V

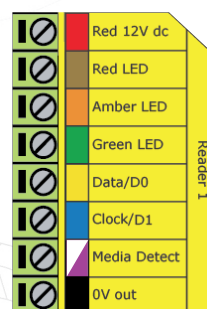

Ensure any unused wires are safely terminated.

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.



+44 (0)1273 811011
support@paxton.co.uk
paxton.support



+49 (0) 251 2080 6900
support@paxton-gmbh.de
paxton.gmbh.support



+33 (0)157 329356
support@paxtonaccess.fr
paxton.support



+32 (0)78485147
support@paxton-benelux.com
paxton.benelux.support



+31 (0)76 3333 999
support@paxton-benelux.com
paxton.benelux.support



+27 (0)21 4276691
support@paxtonaccess.co.za
paxton.support



+1 (800) 672-7298
supportUS@paxton-access.com
usapaxton.support



+11 5715088198
soporte@paxton-access.com
paxton.soporte



+1 (864) 751-3501
soporte@paxton-access.com
paxton.soporte



8000 3570 3783
support@paxtonaccess.ae
paxton.support



+44 (0)1273 811011
support@paxton.co.uk
paxton.support