

Connecting a Keyprocessor SL4 reader to Net2

Overview


The SL4 reader is designed to read Key Processor KP keys.

The reader was tested with 'Reader Type' set to 'Paxton reader' and produced an 8 digit number as a Clock & Data output. (4 digits system number + 4 digits key number).

The security number is stored as a magnetic code within the 1mm thickness of the key. It is read by Hall effect when the key slides down the guidance slot in the reader.



	Cable Pinout	ACU terminal
1	+5V/14V	+12V
-	-	Red LED
-	-	Amber LED
5	Green LED	Green LED
4	Data	Wiegand D0
3	Clock	Wiegand D1
-	-	NOT USED
2	Gnd	0V

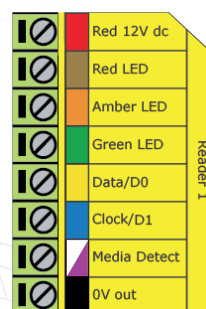

Ensure any unused wires are safely terminated.

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.



+44 (0)1273 811011
support@paxton.co.uk
paxton.support



+49 (0) 251 2080 6900
support@paxton-gmbh.de
paxton.gmbh.support



+33 (0)157 329356
support@paxtonaccess.fr
paxton.support



+32 (0)78485147
support@paxton-benelux.com
paxton.benelux.support



+31 (0)76 3333 999
support@paxton-benelux.com
paxton.benelux.support



+27 (0)21 4276691
support@paxtonaccess.co.za
paxton.support



+1 (800) 672-7298
supportUS@paxton-access.com
usapaxton.support



+11 5715088198
soporte@paxton-access.com
paxton.soporte



+1 (864) 751-3501
soporte@paxton-access.com
paxton.soporte



8000 3570 3783
support@paxtonaccess.ae
paxton.support



+44 (0)1273 811011
support@paxton.co.uk
paxton.support