


Connecting a Nedap uPASS Reach to Net2

Overview

The unit tested was configured for 26bit Wiegand output

The Nedap reader requires either a 12V DC 1A or a 24V DC 500mA supply.
The reader cannot be powered from the Net2 PSU.

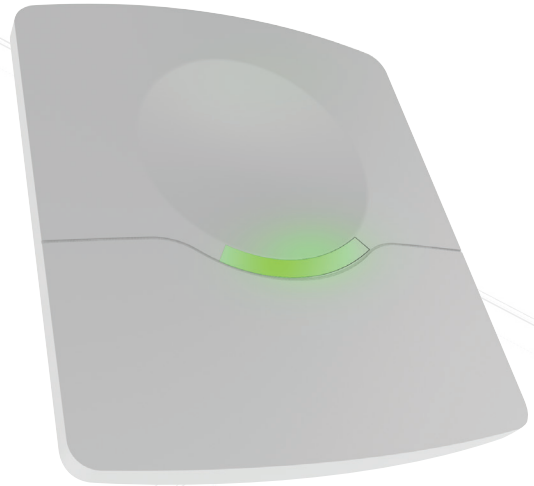

Cable Pinout	ACU terminal
-	+12V
-	Red LED
-	Amber LED
-	Green LED
Out 2	Wiegand D0
Out 3	Wiegand D1
-	NOT USED
Gnd	0V

10	Red 12V dc	Reader 1
11	Red LED	
12	Amber LED	
13	Green LED	
14	Data/D0	
15	Clock/D1	
16	Media Detect	
17	0V out	

Ensure any unused wires are safely terminated.



+44 (0)1273 811011
support@paxton.co.uk
paxton.support



+49 (0) 251 2080 6900
support@paxton-gmbh.de
paxton.gmbh.support



+33 (0)157 329356
support@paxtonaccess.fr
paxton.support



+32 (0)78485147
support@paxton-benelux.com
paxton.benelux.support



+31 (0)76 3333 999
support@paxton-benelux.com
paxton.benelux.support



+27 (0)21 4276691
support@paxtonaccess.co.za
paxton.support



+1 (800) 672-7298
supportUS@paxton-access.com
usapaxton.support



+11 5715088198
soporte@paxton-access.com
paxton.soporte



+1 (864) 751-3501
soporte@paxton-access.com
paxton.soporte



8000 3570 3783
support@paxtonaccess.ae
paxton.support



+44 (0)1273 811011
support@paxton.co.uk
paxton.support