

Connecting a Rosslare AY-M25 Mifare reader to Net2

Overview


The AY-M256 is fully potted, sealed and made of a rigid, UV resistant polycarbonate. It has a maximum range of 7cm.

It is not possible to use the tamper function with Net2.


Programmable multi-format: Wiegand 26-bits w/site code, Fixed 26 - bits, 32 bits reversed, 34 bits, 40 bits.

Operating Frequency: 13.56 MHz

Compatible cards: Mifare® Compatible ISO-14443A

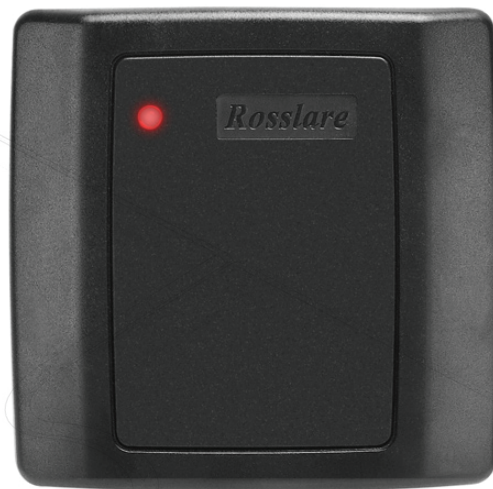

Cable Pinout	ACU terminal
Red	+12V
-	Red LED
-	Amber LED
Brown	Green LED
Green	Wiegand D0
White	Wiegand D1
Purple	NOT USED
Black	0V

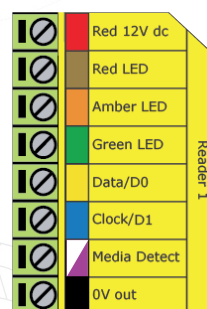

Ensure any unused wires are safely terminated.

Further information on use and programming is available at:

http://www.rosslaresecurity.com/images/products/A_Control/files/AY-M25Datasheet_V2.0_A4.pdf

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.



+44 (0)1273 811011
support@paxton.co.uk
paxton.support



+49 (0) 251 2080 6900
support@paxton-gmbh.de
paxton.gmbh.support



+33 (0)157 329356
support@paxtonaccess.fr
paxton.support



+32 (0)78485147
support@paxton-benelux.com
paxton.benelux.support



+31 (0)76 3333 999
support@paxton-benelux.com
paxton.benelux.support



+27 (0)21 4276691
support@paxtonaccess.co.za
paxton.support



+1 (800) 672-7298
supportUS@paxton-access.com
usapaxton.support



+11 5715088198
soporte@paxton-access.com
paxton.soporte



+1 (864) 751-3501
soporte@paxton-access.com
paxton.soporte



8000 3570 3783
support@paxtonaccess.ae
paxton.support



+44 (0)1273 811011
support@paxton.co.uk
paxton.support