

Connecting a TSSI Verid + biometric reader to Net2

Overview

Configuration of the Verid+ input and output formats must be configured using the Verid Manager software. If configured for Track2 (Magtek), no additional settings are required in the Net2 software.

Users must first be enrolled on the Verid+. Once enrolled, configure the ACU reader port as a desktop reader and enrol users into the Net2 software.



Cable Pinout	ACU terminal
Power Input 12V	+12V
LED I/P Fail	Red LED
-	Amber LED
LED I/P Pass	Green LED
Door controller Data - D0	Wiegand D0
Door controller Data - D1	Wiegand D1
-	NOT USED
Power Input 0V, LED I/P 0V, Door controller 0V	0V

10	Red 12V dc	Reader 1
11	Red LED	
12	Amber LED	
13	Green LED	
14	Data/D0	
15	Clock/D1	
16	Media Detect	
17	0V out	

Ensure any unused wires are safely terminated.

To configure the LED setting, open the Net2 server configuration utility and on the 'General' tab, check the 'Display reader LED's in OEM style' box.

If the option is not available, please contact Technical support for further advice.



+44 (0)1273 811011
support@paxton.co.uk
paxton.support



+49 (0) 251 2080 6900
support@paxton-gmbh.de
paxton.gmbh.support



+33 (0)157 329356
support@paxtonaccess.fr
paxton.support



+32 (0)78485147
support@paxton-benelux.com
paxton.benelux.support



+31 (0)76 3333 999
support@paxton-benelux.com
paxton.benelux.support



+27 (0)21 4276691
support@paxtonaccess.co.za
paxton.support



+1 (800) 672-7298
supportUS@paxton-access.com
usapaxton.support



+11 5715088198
soporte@paxton-access.com
paxton.soporte



+1 (864) 751-3501
soporte@paxton-access.com
paxton.soporte



8000 3570 3783
support@paxtonaccess.ae
paxton.support



+44 (0)1273 811011
support@paxton.co.uk
paxton.support